

* YH89A7 100Specification

Specific	Notes	
Standard Model	YH89A7-100	Basic Model
Extended Model		

	Revision Record					
Version	Reviser	Description	Date			

Checked by	Date
Approved by	Date



1 Specification

1.1 Basic Specification

•	
Model	YH89A7-100(Including Extended Model)
Туре	Low Side Shell Design Scroll Compressor
Application	Air conditioning
Refrigerant	R22
Displacement(cc/rev)	49.4
Cooling Capacity(W) ^(a)	10680
Input Power(W) ^(a)	3180
RLA(A) ^(a)	11
Cooling COP(W/W) ^(a)	3.35
Power Supply	208-230V/3~/60Hz
Min. Operating Voltage(V)	187
Max. Operating Voltage(V)	253
LRA(A)	88
Max. Operating Current(A) ^(b)	15.5
Rated Speed(r/min) ^(a)	3500
Compressor Weight(With Oil)(kg)	30
Oil Type	3GS
Oil Kinematic Viscosity(cSt, 40℃)	32
Oil Density(kg/L, 20°C)	0.902
Primary Charge(L)	1.4
Recharge(L)	1.25
Oil Circulation Rate ^(a)	≤1%
Rated Sound(Sound Power)(dBA) ^(c)	70
Max. Operating Sound in Running Envelope (Sound Power)(dBA)	75
Vibration DisplacementPeak-Peak(mm) ^(d)	≤0.09
Moisture(mg)	≤500
Impurity(mg)	≤100
LVS(V) ^(e)	177
MOV (V) ^(f)	187
Start Capacitor(µF/V)	1
Start Relay	1
Run Capacitor(µF/V)	1
IP Class of Terminal Box	IP21
Compressor Color	Black

1.2 Motor Parameters

Motor Type	Three-phase asynchronous motor	
Motor Pole	2	
Motor Insulation Class(℃)	130(B Class)	
Line to Line Resistance UV(CS)(Ω, 25°C)	0.784(±10%)	
Line to Line Resistance UW(CR)(Ω, 25°C)	0.784(±10%)	
Line to Line Resistance VW(SR)(Ω, 25°C)	0.784(±10%)	
Dielectric Strength	2000VAC / 1s / 50Hz or 60Hz, Leakage	
Dielectric Strength	Current≤5mA	
Insulation Resistance(MΩ)	≥20	
Ground Resistance(Ω)	≤0.1	

1.3 Safety Operating Limit

Tightness Test Pressure(MPa)	3.8-4.0
Max. Operating Pressure	
High Side(MPa)	H3.0/L2.0
Low Side(MPa)	H3.0/L2.0
Compressor FreeSpace(Without Oil)	
High Side(L)	H1.0/L3.8
Low Side(L)	П1.0/L3.0
Max. Refrigerant Charge(kg)	See Notes
	≤125
Discharge Temperature Limit(℃)	(120mm to compressor discharge connection
	and wellinsulated)
Start-Stop Interval	See Notes

Performance Condition:

Condition	Condition Description
а	Rated Condition
b	Max. Load Condition, 90% Rated Voltage
С	Rated Condition, A Weighted Sound Power
d	Rated Condition, Max Operating Normal Displacement of
	Compressor Housing
е	Discharge Pressure and Suction Pressure: Saturated Refrigerant
	Pressure at 40℃
f	Max. Load Condition

2 Rated Condition, 48 Hours Break-in-Running before implementing Performance and Sound Testing

ltem	Rated Condition	Max. Load Condition
E.T.(°C)/C.T.(°C)/S.H.(K)/ S.C.(K)/A.T.(°C)	7.2/54.4/11.1/8.3/35	11.9/65.5/11.9/8.3/46.1
Cooling Capacity Deviation	≥95.0%	-
Power Deviation	≤105.0%	-
COP Deviation	≥95.0%	-

3 Internal Protector


Protection Method	Config	Parameter					
	With	Vendor	Vendor1	Vendor2			
		Model	37HM408-XX				
Internal Overload		Open Temp.(°C)	125±5				
Protector		Close Temp. (°C)	60±9				
		Chart Time Trin	64A	Α			
		Short Time Trip	2-10s	s			
Internal Pressure	With	2.76-3.10MPa				2.76.2.10MDo	
Relieve Valve	VVILII	2.70-3.10WFa					

4 Accessory

YH89A7-100						
Item	Name	P.N.	PCS			
1	Grommet	070-0003-00	4			
2	Sleeve	010-0014-00	4			
3						
4						
5						



- 5 Compressor Operating Envelope
- 5.1 Compressor Operating Envelope

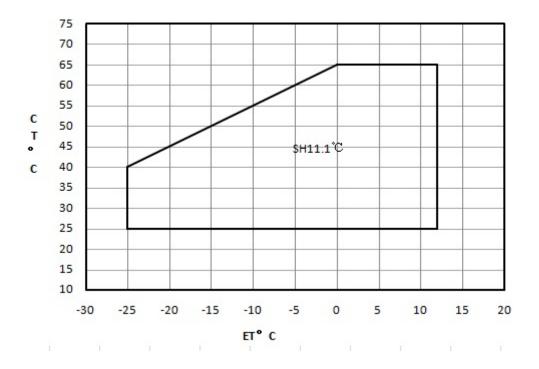

- 5.2 EVI control logic(only for EVI module)
 - Recommend system subcooling 5K
 - DLT≤95°C,control superheat of injection line=5K
 - DLT>95°C,control DLT=95°C
 - Max injection pressure≤2.0MPa
- 6 Compressor Performance Sheet
 - Performance Based on Superheat is within the Operating Envelope, Subcooling after Condenser is 8.3K;
 - Performance Calculated by Coefficients of Polynomial is Only Suitable for the Condition within Operating Envelope
 - Capacity, Power can be Calculated by Coefficients of Polynomial

6.1 Performance Table

Туре	E.T.(℃)	-25	-20	-15	-10	-5	0	5	10
	65						7135	8636	10353
	60					6290	7671	9253	11056
	55				5466	6733	8185	9844	11728
	50			4673	5830	7158	8678	10409	12370
Cap (W)	45		3918	4971	6181	7567	9149	10947	12981
	40	3212	4166	5262	6519	7958	9598	11460	13562
	35	3423	4410	5544	6845	8333	10027	11947	14114
	30	3635	4651	5819	7159	8691	10434	12409	14635
	25	3849	4889	6087	7462	9033	10821	12846	15128
	65						4031	4027	4031
	60					3601	3601	3603	3614
	55				3210	3219	3225	3233	3249
	50			2848	2871	2886	2897	2910	2932
Power (W)	45		2506	2548	2576	2595	2611	2628	2654
	40	2172	2239	2286	2318	2340	2360	2381	2409
	35	1934	2004	2054	2089	2115	2137	2160	2191
	30	1722	1795	1847	1885	1912	1936	1961	1994
	25	1530	1604	1658	1697	1726	1750	1776	1809

6.2 Ten Coefficients of Polynomial

Expression	z = p0 + p1*x + p2*y + p3*x^2 + p4*x*y + p5*y^2 + p6*x^3 + p7*x^2*y + p8*x*y^2 + p9*y^3						
Description	z:Cooling Capacity(W) or Power (W) Specially: Heating Capacity(W)=Cooling Capacity(W)+Power (W) x: E.T. ℃						
	y: C.T. ℃ p0~p9: Coefficients of P	olynomial					
Cooling Cap.	Value	Value Power Value					
Factor	value	Factor	value				
p0	12457.18553 p0 821.759193						
p1	414.931109 p1 3.160143						
p2	-55.71262 p2 43.74643						
р3	5.244377 p3 0.008731						
p4	-0.930912	p4	0.155957				
p5	-0.380151 p5 -0.483215						
p6	0.026502 p6 0.00739						
р7	-0.020489	р7	0.000749				
p8	-0.01761 p8 -0.003472						
р9	-0.000346 p9 0.008767						

Notes: Coefficients of polynomial are based on the fitting results of some sample data,




which can be used as a reference of compressor selection, butcannot completely eliminatecustomer's test.

7 Notes


- 7.1 It is not allowed to perform vacuum in the system by using the refrigeration compressor. The compressor can start only after the refrigerant charged. In some cases, such as on the field site, if it is limited by the situation that can't charge the required volume of refrigerant, 50% of the required refrigerant is charged necessary before the compressor starts. Double check the system and make sure everything is under safe status, then power on the compressor and charge the remained refrigerant when the compressor is running.
- 7.2 It is not allowed to charge the refrigerant from the suction or discharge line closes to the compressor. The charge port should be arranged on the connection pipe of suction line accumulator or receiver, which is on the side far away to the compressor, to avoid the liquid refrigerant flood back.
- 7.3 Refrigerant charge limitation: the ratio between the weight of oil and refrigerant should be >=0.4.
- 7.4 It is not allowed to vacuum by compressor, not allowed to run the compressor without refrigerant, and not allowed to run the compressor on the reversed direction for long duration.
- 7.5 The compressor can only work with approved refrigerant.
- 7.6 The compressor is not allowed to work outside its envelope, the system should guarantee the suction line superheat and avoid the liquid refrigerant flood back.
- 7.7 When the suction and discharge plugs are removed, the assembly and brazing should be done in 15 minutes.
- 7.8 The frequently start/stop should be avoided. The suggested minimum continuous running time is 10 minutes to guarantee the safe oil level (>=50% initial charge volume), the suggested minimum interval duration between start and stop is 3 minutes.
- 7.9 The deviation of supplied voltage should be less than +/-10% of rated voltage.
- 7.10 A 70W crankcase heater is recommended to avoid the refrigerant migration during the off circle and flood start. The crankcase heater should be power on 12 hours earlier than the first start or restart after long duration off.
- 7.11 The system should be equipped with necessary protection devices, such as pressure, temperature, oil return, overcurrent and phase fault, etc.
- 7.12 The compressor is not allowed to lay down or place upside down during transportation, stock and installation. The maximum inclination is 15° when the compressor is running.

8 Drawings


8.1 Outline Drawing

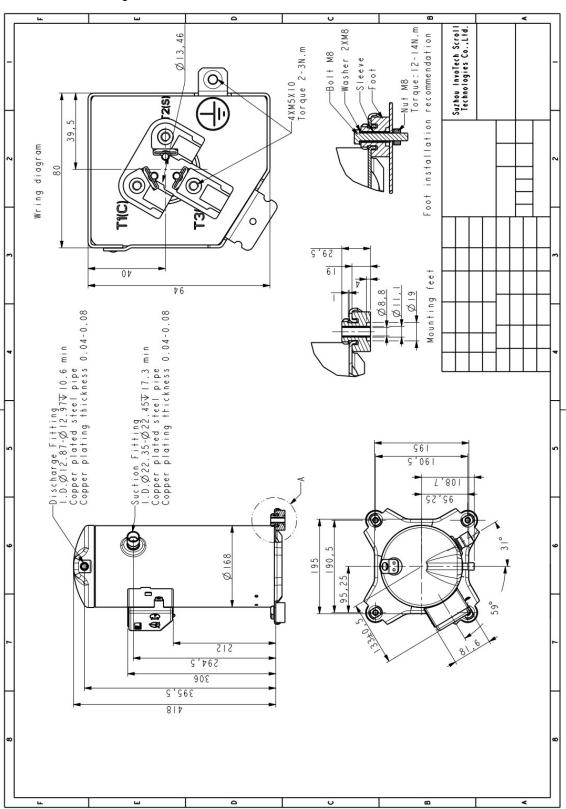

8.2 Sleeve Drawing

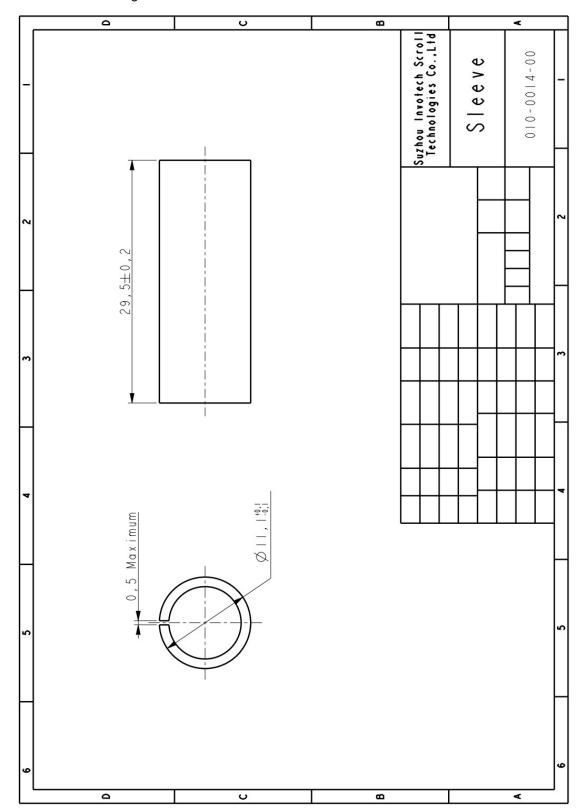

8.3 Grommet Drawing

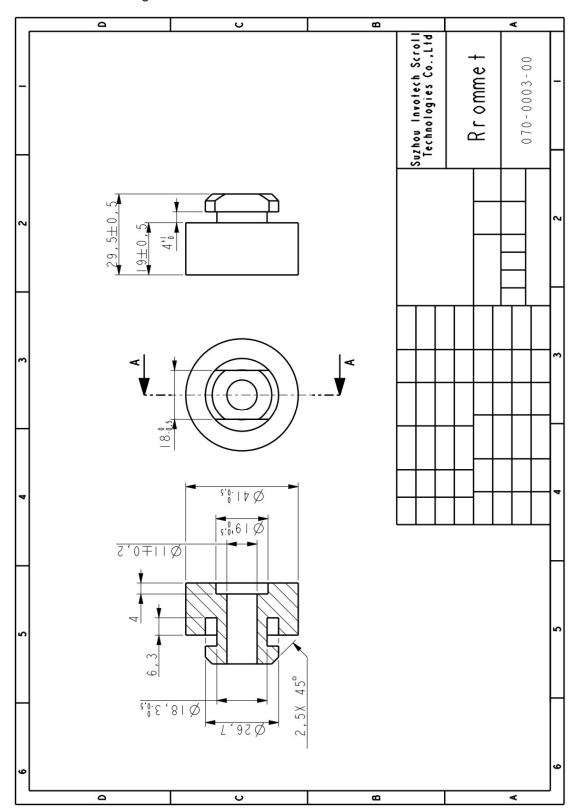



9 Single Phase Compressor Wiring Diagram Only for single phase



10 Application

See Details in the 《YH serial air-condition scroll compressor application manual》