

* YH150A3 100Specification

Specific	Notes	
Standard Model	Standard Model YH150A3-100	
Extended Model		

	Revision Record					
Date		Version Reviser Description				

Checked by	Date
Approved by	Date



1 Specification

1.1 Basic Specification

1.1 Basic Specification	
Model	YH150A3-100(Including Extended Model)
Туре	Low Side Shell Design Scroll Compressor
Application	Air-condition Refrigeration
Refrigerant	R22
Displacement(cc/rev)	83.3
Cooling Capacity(W) ^(a)	18000
Input Power(W) ^(a)	5454
RLA(A) ^(a)	27.5
Cooling COP(W/W) ^(a)	3.3
Power Supply	208-230V/1~/60Hz
Min. Operating Voltage(V)	187
Max. Operating Voltage(V)	253
LRA(A)	140
Max. Operating Current(A) ^(b)	37.1
Rated Speed(r/min) ^(a)	3500
Compressor Weight(With Oil)(kg)	37
Oil Type	3GS
Oil Kinematic Viscosity(cSt, 40°C)	32
Oil Density(kg/L, 20°C)	0.902
Primary Charge(L)	1.6
Recharge(L)	1.45
Oil Circulation Rate ^(a)	≤1%
Rated Sound(Sound Power)(dBA) ^(c)	71
Max. Operating Sound in Running Envelope (Sound Power)(dBA)	76
Vibration Displacement Peak-Peak(mm) ^(d)	≤0.1
Moisture(mg)	≤600
Impurity(mg)	≤120
LVS(V) ^(e)	177
MOV (V) ^(f)	187
Start Capacitor(µF/V)	250
Start Relay	HLR3800-3F3C
Run Capacitor(µF/V)	100/450
IP Class of Terminal Box	IP21
Compressor Color	Black
L	

1.2 Motor Parameters

Motor Type	Single-phase asynchronous motor
Motor Pole	2
Motor Insulation Class(℃)	130(B Class)
Line to Line Resistance UV(CS)(Ω, 25°C)	0.777(±10%)
Line to Line Resistance UW(CR)(Ω, 25°C)	0.395(±10%)
Line to Line Resistance VW(SR)(Ω, 25°C)	1.172(±10%)
	2000VAC / 1s / 50Hz or 60Hz, Leakage
Dielectric Strength	Current≤5mA
Insulation Resistance(MΩ)	≥20
Ground Resistance(Ω)	≤0.1

1.3 Safety Operating Limit

Tightness Test Pressure(MPa)	3.8-4.0
Max. Operating Pressure	
High Side(MPa)	H3.0/L2.0
Low Side(MPa)	H3.0/L2.0
Compressor FreeSpace(Without Oil)	
High Side(L)	H1.0/L3.7
Low Side(L)	П1.0/E3.7
Max. Refrigerant Charge(kg)	See Notes
	≤125
Discharge Temperature Limit(℃)	(120mm to compressor discharge connection
	and well insulated)
Start-Stop Interval	See Notes

Performance Condition:

Condition	Condition Description
а	Rated Condition
b	Max. Load Condition, 90% Rated Voltage
С	Rated Condition, A Weighted Sound Power
d	Rated Condition, Max Operating Normal Displacement of
	Compressor Housing
е	Discharge Pressure and Suction Pressure: Saturated Refrigerant
	Pressure at 40°C
f	Max. Load Condition

2 Rated Condition, 48 Hours Break-in-Running before implementing Performance and Sound Testing

Item	Rated Condition	Max. Load Condition	
E.T.(°ℂ)/C.T.(°ℂ)/S.H.(K)/	7.2/54.4/11.1/8.3/35	11.9/65.5/11.9/8.3/46.1	
S.C.(K)/A.T.(°ℂ)	7.2/34.4/11.1/0.3/33	11.9/05.5/11.9/0.5/40.1	
Cooling Capacity Deviation	≥95.0%	-	
Power Deviation	≤105.0%	-	
COP Deviation	≥95.0%	-	

3 Internal Protector


Protection Method	Config	Parameter				
		Vendor	Vendor1	Vendor2		
		Model	UP16QC051A-XX			
Internal Overload	With	Open Temp.(°C)	150±5			
Protector	VVIUI	Close Temp. (°C)	80±9			
		Short Time Trip	155A	Α		
			3-10s	s		
Internal Pressure	With		-MPa			
Relieve Valve	VVILII	-MFa				

4 Accessory

YH150A3-100						
Item	Name	Name P.N.				
1	Grommet	070-0003-00	4			
2	Sleeve	010-0014-00	4			
3	StartBox	110-0076-10	1			
4						
5						



- 5 Compressor Operating Envelope
- 5.1 Compressor Operating Envelope

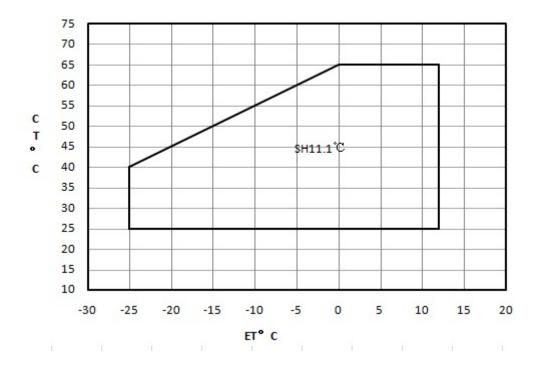

- 5.2 EVI control logic(only for the compressors with EVI module)
 - Recommend system subcooling 5K
 - DLT≤95°C,control superheat of injection line=5K
 - DLT>95°C,control DLT=95°C
 - Max injection pressure≤2.0MPa
- 6 Compressor Performance Sheet
 - Performance Based on Superheat is within the Operating Envelope, Subcooling after Condenser is 8.3K;
 - Performance Calculated by Coefficients of Polynomial is Only Suitable for the Condition within Operating Envelope
 - Capacity, Power can be Calculated by Coefficients of Polynomial

6.1 Performance Table

Item	C.T.(℃)	-25	-20	-15	-10	-5	0	5	10
	65						12048	14583	17482
	60					10621	12954	15626	18670
	55				9230	11369	13823	16623	19805
0 1:	50			7890	9845	12088	14654	17577	20889
Cooling Cap.(W)	45		6616	8395	10437	12778	15449	18486	21921
Cap. (w)	40	5424	7035	8885	11009	13438	16208	19352	22902
	35	5780	7447	9362	11559	14071	16932	20175	23833
	30	6138	7854	9827	12090	14676	17620	20955	24714
	25	6499	8256	10279	12600	15254	18274	21693	25545
	65						6870	6862	6869
	60					6158	6157	6161	6179
	55				5511	5526	5535	5549	5576
	50			4913	4951	4975	4993	5016	5051
Power (W)	45		4346	4416	4463	4494	4520	4549	4591
	40	3794	3905	3982	4035	4073	4104	4139	4187
	35	3401	3517	3599	3657	3700	3736	3775	3826
	30	3050	3171	3257	3319	3365	3404	3446	3499
	25	2732	2855	2944	3008	3056	3097	3140	3194

6.2 Ten Coefficients of Polynomial

Expression	$z = p0 + p1*x + p2*y + p3*x^2 + p4*x*y + p5*y^2 + p6*x^3 + p7*x^2*y + p8*x*y^2 + p9*y^3$						
z:Cooling Capacity(W) or Power (W)							
	Specially: Heating Capacity(W)=Cooling Capacity(W)+Power (W)						
Description	x: E.T. ℃						
	y: C.T. ℃						
	p0~p9: Coefficients of P	olynomial					
Cooling Cap.	Value	Power	Value				
Factor	value	Factor	value				
p0	21036.024 p0 1560.7468						
p1	700.68 p1 5.2272						
p2	-94.08 p2 72.36108						
р3	8.856 p3 0.014442						
p4	-1.572 p4 0.257968						
р5	-0.641947	-0.641947 p5					
р6	0.044754	p6	0.012224				
p7	-0.034599	р7	0.001238				
p8	-0.029737	p8	-0.005742				
р9	-0.000584 p9 0.014501						

Notes: Coefficients of polynomial are based on the fitting results of some sample data, which can be used as a reference of compressor selection, but cannot completely eliminate customer's test.




7 Notes


- 7.1 It is not allowed to perform vacuum in the system by using the refrigeration compressor. The compressor can start only after the refrigerant charged. In some cases, such as on the field site, if it is limited by the situation that can't charge the required volume of refrigerant, 50% of the required refrigerant is charged necessary before the compressor starts. Double check the system and make sure everything is under safe status, then power on the compressor and charge the remained refrigerant when the compressor is running.
- 7.2 It is not allowed to charge the refrigerant from the suction or discharge line closes to the compressor. The charge port should be arranged on the connection pipe of suction line accumulator or receiver, which is on the side far away to the compressor, to avoid the liquid refrigerant flood back.
- 7.3 Refrigerant charge limitation: the ratio between the weight of oil and refrigerant should be >=0.4.
- 7.4 It is not allowed to vacuum by compressor, not allowed to run the compressor without refrigerant, and not allowed to run the compressor on the reversed direction for long duration.
- 7.5 The compressor can only work with approved refrigerant.
- 7.6 The compressor is not allowed to work outside its envelope, the system should guarantee the suction line superheat and avoid the liquid refrigerant flood back.
- 7.7 When the suction and discharge plugs are removed, the assembly and brazing should be done in 15 minutes.
- 7.8 The frequently start/stop should be avoided. The suggested minimum continuous running time is 10 minutes to guarantee the safe oil level (>=50% initial charge volume), the suggested minimum interval duration between start and stop is 3 minutes.
- 7.9 The deviation of supplied voltage should be less than +/-10% of rated voltage.
- 7.10 A 70W crankcase heater is recommended to avoid the refrigerant migration during the off circle and flood start. The crankcase heater should be power on 12 hours earlier than the first start or restart after long duration off.
- 7.11 The system should be equipped with necessary protection devices, such as pressure, temperature, oil return, overcurrent and phase fault, etc.
- 7.12 The compressor is not allowed to lay down or place upside down during transportation, stock and installation. The maximum inclination is 15° when the compressor is running.

8 Drawings


8.1 Outline Drawing

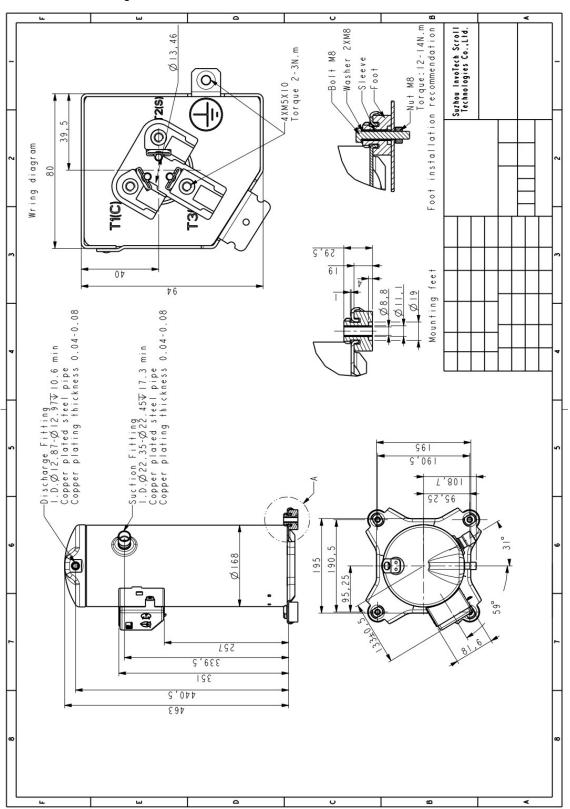

8.2 Sleeve Drawing

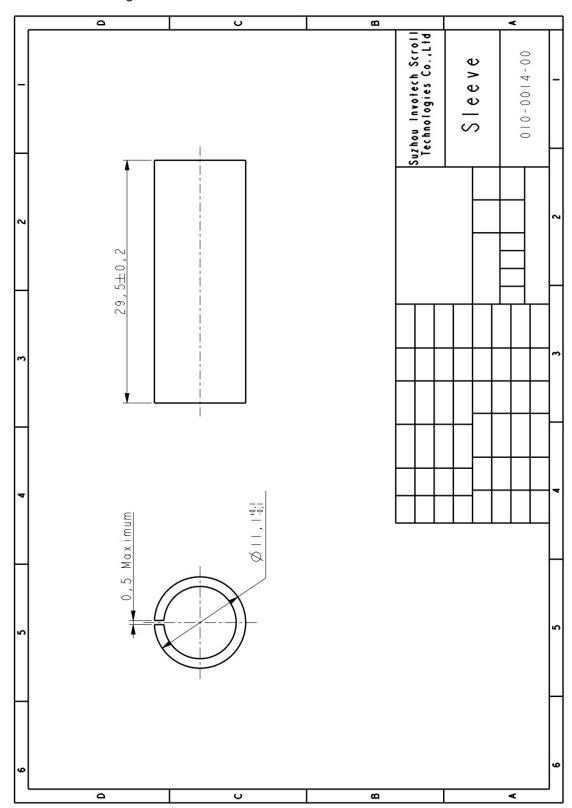


8.3 Grommet Drawing

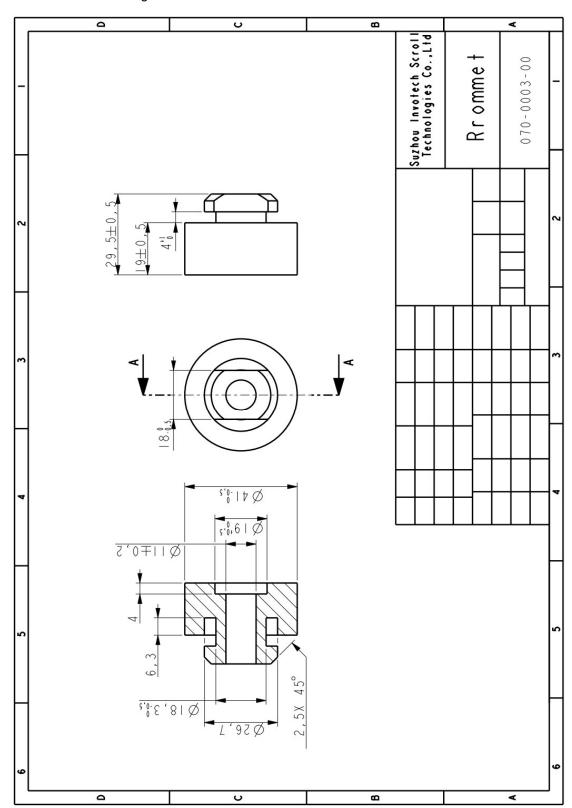



9 Single Phase Compressor Wiring Diagram

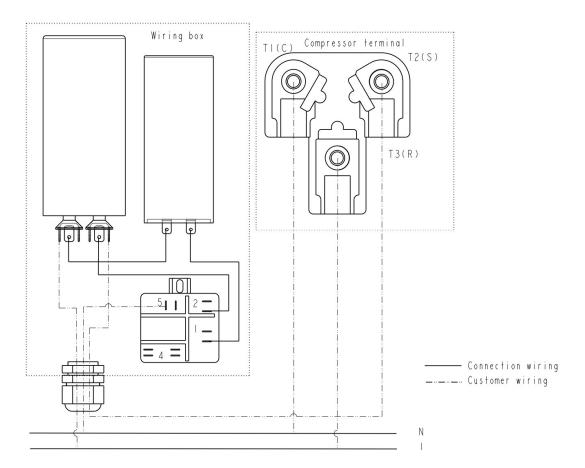



10 Application

See Details in the $\,\,$ $\,$ $\,$ $\,$ YH serial air-condition scroll compressor application manual $\,$